

INSTALLATION & ASSEMBLY INSTRUCTIONS

LED RLM SERIES LUMINAIRE

US & Foreign Patents Pending
Utilizing SMARTVISION™ Technology



Listed to UL1598 for Wet Locations,
cord-hung for Damp Locations

IMPORTANT: Luminaires must be installed per instructions provided to avoid field failure!


WARNING: Make sure all power is disconnected prior to installation.

IMPORTANT: Wiring to be performed by qualified electrician per National Electrical Code and local code.

IMPORTANT: For use ONLY with LSI's GB X 3 series of Goosenecks when wall-mounting, or for use with 3/4" trade-size conduit when ceiling-mounted.

Stem / Arm Mount LED RLM


1. For use only with LSI's GB X 3 series of goosenecks when wall-mounting, or for use with 3/4" trade-size conduit when ceiling-mounted.
2. Follow instructions included with stem / arm hardware kit.
3. Wire per National Electrical Code, local code, and diagram at right.

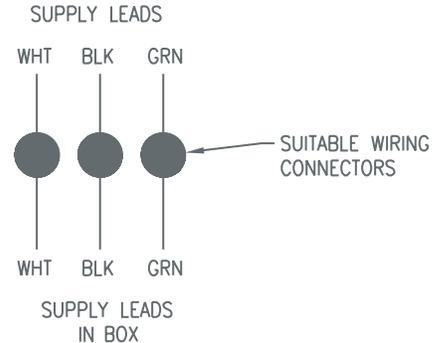

Ceiling Canopy with Cord Hung LED RLM

1. Cut cord to desired hanging length, allowing an additional 6" for wiring.
2. Slide cord through plastic bushing, star washer, and canopy.
3. Thread nipple into octagonal-box bracket and slide cord up through the nipple.octagon box bracket assembly.
4. Tie an over-hand knot 6" down from cord. Remove cord jacket just above knot, exposing leads for wiring.
5. Attach nipple/octagon-box bracket assembly to octagon box.
6. Make wiring connections per diagram above, then slide canopy up onto nipple.

OCTAGON BOX BRACKET

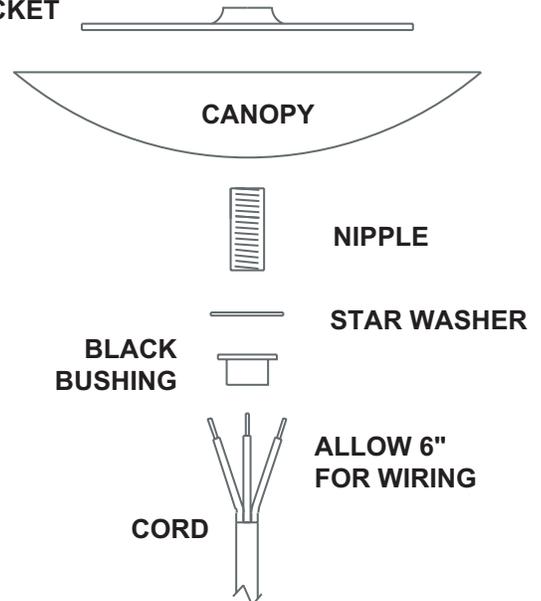

Installation Questions?

Call LSI Field Service Department at:
1-800-436-7800 Ext. 3300 Fax 1-877-861-1368