


# INSTALLATION AND ASSEMBLY INSTRUCTIONS CH2M SERIES GLARE SHIELD

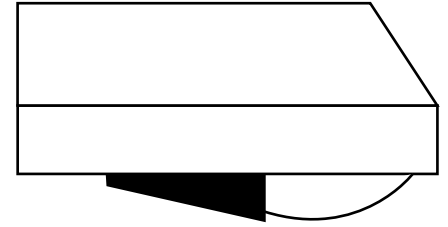

**Tools Required:** Drill, 5/32" drill bit, #2 Phillips screwdriver, pencil or pen

1. Measure from edge of door 3-3/4" and strike a line. Edge of glare shield will stop at this line. See Fig. 1.
2. Align sides of shield with sides of door. Holding shield in place, mark centers of 2 holes near the line drawn in Step 1. See Fig. 2.
3. Place shield aside. Drill (2) 5/32" holes.
4. Install shield using 2 screws.
5. Open door; allow to gently swing down.
6. On inside of door, hook clips on side of door to outer skin. See Fig. 3 and Fig.4.
7. Secure clips to side of shield. See Figure 5.

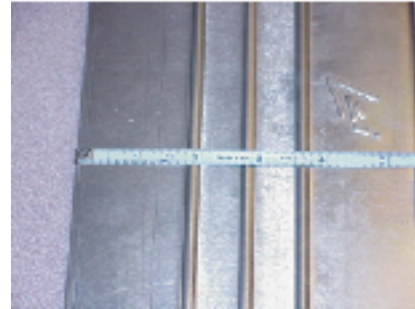


FIG. 1

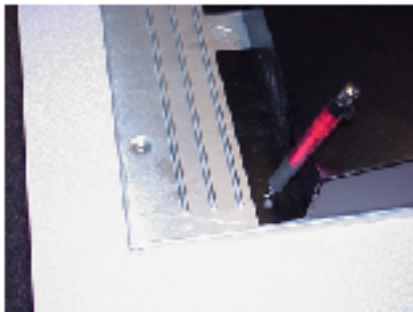


FIG. 2

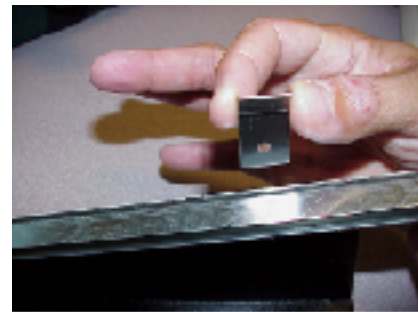


FIG. 3

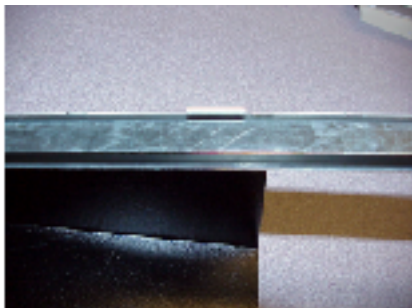


FIG. 4

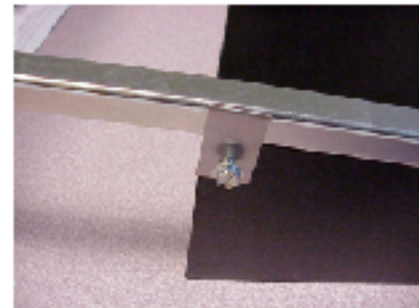


FIG. 5



LSI Industries Inc.  
10000 Alliance Road

Cincinnati, Ohio 45242

(513) 793-3200

Fax (513) 793-0147

[www.lsi-industries.com](http://www.lsi-industries.com)

**Installation Questions?**  
Call LSI Field Service Department at:  
1-800-436-7800 Ext. 3300 Fax: 1-877-861-1368